

Bar-In-A-Box SET-UP INSTRUCTIONS

1



Bar-In-A-Box comes folded to 5 inches!

2



Open right door to stabilize bar.

3



Open left door to stabilize bar. Front casters also lock for extra stability.

4



Pull up top counter & place front corners on frame hooks.

5



Pull down lower shelf & place front corners on frame hooks.

6



View of frame hooks. Be sure to secure in place on left & right.

7



Locate top counter & hardware (wrench, allen key, bolts, nuts, washers) for attaching.

8



Place counter on top of bar & situate holes evenly. Tab should face guest NOT bartender. Insert bolts in holes & tighten.

9



Insert ice bin into left side next to cutting board.

10



After speed well is assembled, attach to front of bar left & right screws. (see reverse for Speedwell Set-Up)

11



Adjust top counter height & level by turning rubber nib on frame. Lock front legs by turning clockwise.

12



Your Bar-In-A-Box is ready for use! (See reverse for Speedwell, LED, & Battery set-up.)

CAUTION:

Never move the Bar-In-A-Box with wheels in locked position. Use care when moving to avoid toppling.



Thank you for your Bar-In-A-Box purchase. We hope you enjoy our SmartBar Products line. If you have any questions please contact us at: service@smartbarproducts.com www.smartbarproducts.com

Speed Well, LED, Graphics Panel

SET-UP INSTRUCTIONS

1



Speed well consists of 5 plates. Back will have 2 holes for attaching to bar

2



Hook end plate into notches in front plate.

3



Hook end plate into notches in back plate.

4



Be sure orientation of both end plates "bend" is toward bottom.

5



Hook other end plate to front & back plate.

6



Place speed well bottom into base and secure it to bottom of plate's inner seam.

7



Underside of left (inside corner) bracket you'll find adaptor with plug. Plug into ground outlet to power LED lighting.

8



If you have purchased an optional battery, place on bracket. Connect battery to controller box.

9



Use hand held remote control to change LED colors, speed, effects.

10



If you have a printed front panel to insert, slide front white polycarbonate panel up slightly to insert print flush against it.

11



Printed panels are removable. They come with a protective layer of film. Peel off film carefully from corner prior to inserting print.

12



If you need to change side panels - fold top to expose side door slot. Pull side panel out from the side.

Visit www.smartbarproducts.com for more information and downloadable instructions for hand held remote control and rechargeable battery.